

KB318 and KB319 BISTRO HIGH CHAIR REPLACEMENT CROTCH STRAP INSTRUCTIONS

P/N 884-KIT

Tools Required:

One Phillips Head Screwdriver

Parts Supplied:

Crotch Strap

One ½" Modified Truss Head Wood Screw

1. Flip the chair over so that the underside of the seat is visible.
2. Using a Phillips Head screwdriver remove the screw securing the crotch strap to the underside of the seat.
3. Discard the old strap and screw.
4. Take the new strap and fold it over the front plastic loop on the chair, so that you have equal length of strap on both sides.
5. Take hold of both ends of the strap and pull it tight under the chair. Using the screw provided, screw through both ends of the strap and into the hole where the original screw was located.
6. Ensure the screw is secured to the chair, before flipping the chair over and returning it to use.

