


THE CLASSIC HIGH CHAIR USAGE INSTRUCTIONS

P/N KB103

Please Note:

This product is designed to be used by an infant or child capable of sitting upright and unassisted. Waist restraint strap should be buckled at all times when in use.

Restraint Usage:

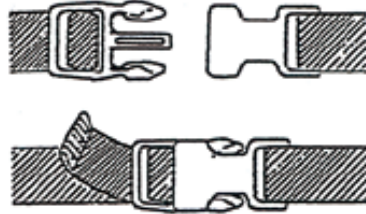

To fasten the waist strap, push spring tabs into the buckle receptacle until both lock in place and a “click” is heard.

The waist restraint can be adjusted to make the strap tighter or looser.

You are responsible for the safe operation of this unit.

Inspection Criteria:

A properly maintained unit:

- Has both ends of a functioning, non-frayed strap: buckle clicks when closed and is attached at both ends on seat back.
- Has an intact warning label affixed to the seat back. (If damaged or unreadable, please replace.)

**To order replacement parts call
888.733.3456 or 303.539.8300
or visit www.koalabear.com.**

Warning:



WARNING: “Prevent serious injury or death from falls or sliding out.” Always secure child in the restraint. Always keep child in view while in the high chair. Never leave child unattended.



WARNING: “The child should be secured in the high chair at all times by the restraining system.” It is recommended that the high chair be used only by children capable of sitting upright and unassisted.

Maintenance:

Clean and sanitize regularly. The Classic High Chair can be cleaned as follows:

- Wipe down high chair with a soft rag using a non-abrasive cleaner.
- Cycle in a commercial dishwasher.

Important: **DO NOT USE BLEACH** on this product. May cause discoloration. Use of bleach on this product will void warranty. Do not use abrasive cleaners as they can scratch the product.

